

Assembly Instructions


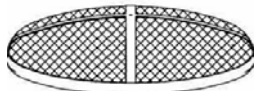




ITEM Number : ALZ381-1





Product Name: Southwind Square Weave Fire Pit

PRE-ASSEMBLY PREPARATION:

- Unpack parts on a clean, flat surface and check against the parts list.
 - This fire pit is intended for outdoor use only. **DO NOT** use on a wooden deck.
 - Do not use near flammable or combustible objects or materials.
 - It is intended to burn wood logs only.
 - Not for use by children. Keep children & pets away from open flames.
 - Never leave burning fire pit unattended.
 - Always extinguish fire thoroughly before leaving the fire pit.
 - The lift handle on the mesh screen will be hot and unsafe to directly touch during use.
- Carefully use the included poker when handling.
- Do not use the fire pit as cooking appliance. It is not designed for grilling food.
 - Keep the small parts, including **BOLTS AND NUTS** away from the children.

Panel and Fittings Identification:

NO.	PARTS	IMAGES	QTY.
A	Lift handle		1
B	Screen		1
C	Log grate		1
E	Grate supporter		3
F	Fire bowl		1
G	Leg		3

H	Poker		1
I	M6 Bolt		6
J	M6 Nut		7
K	PVC Cover		1

Step By Step Assembly Instructions

Step 1: Choose a level location for set up.

Step 2: Reverse Fire bowl F and place it on the level ground. Connect the Leg G and Grate supporter E to the Fire bowl, use Bolts I and Nuts J to secure them. Do the same for the other two legs and Grate supporters. Fig 1.

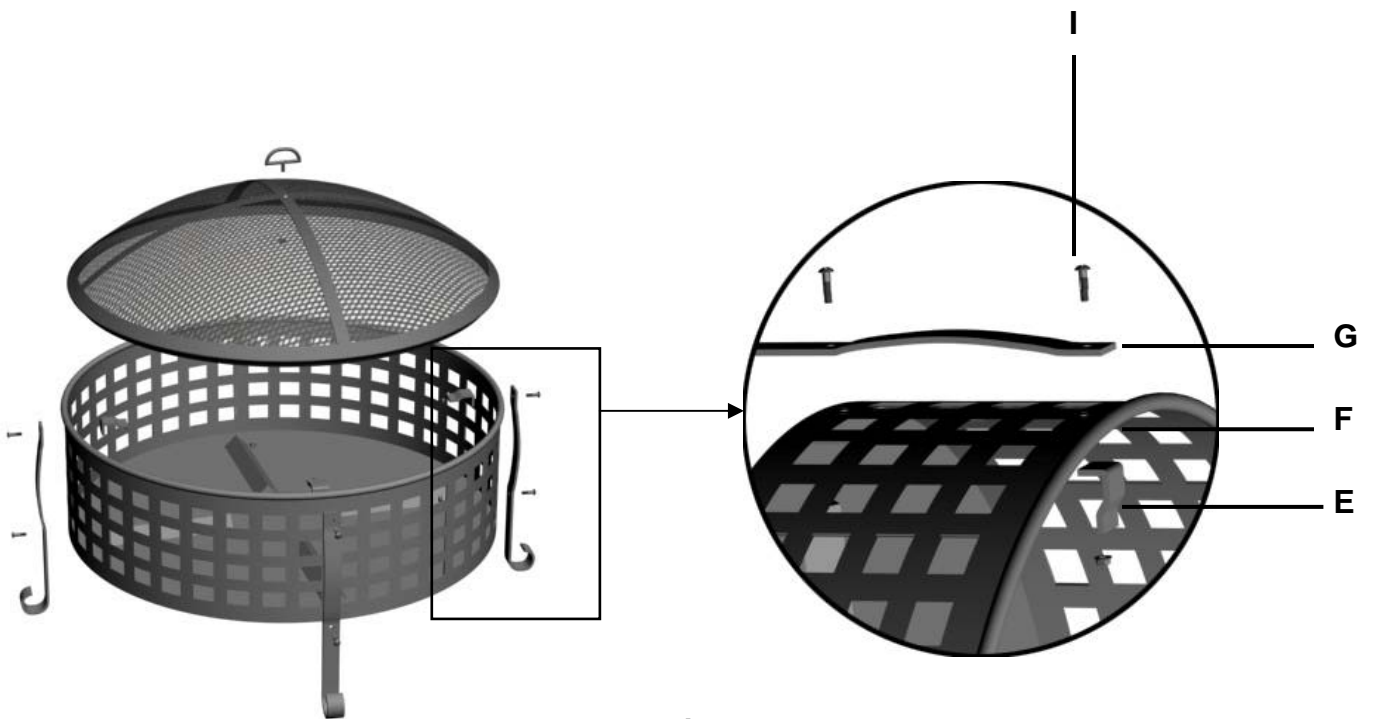


Fig 1

Step 3: Turn around the firepit to have it stand upright in normal status.

Step 4: Connect Lift handle A with Screen B with Nut J. Fig 2.

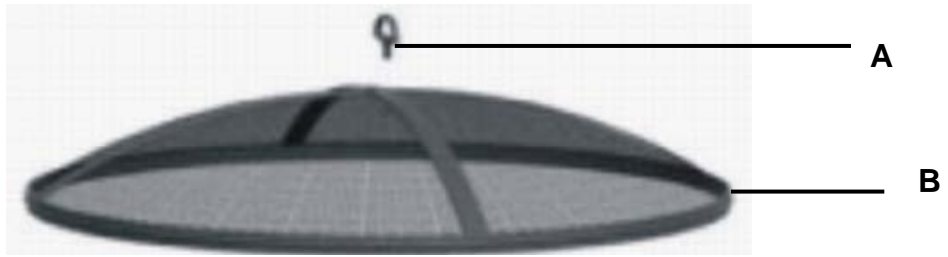


Fig 2

Step 5: Place on Wood grate C, Screen B on top of Fire bowl F and use Safety Poker H for possible convenience. Fig 3.

The PVC cover (K) with crack-proof construction is weather resistant.

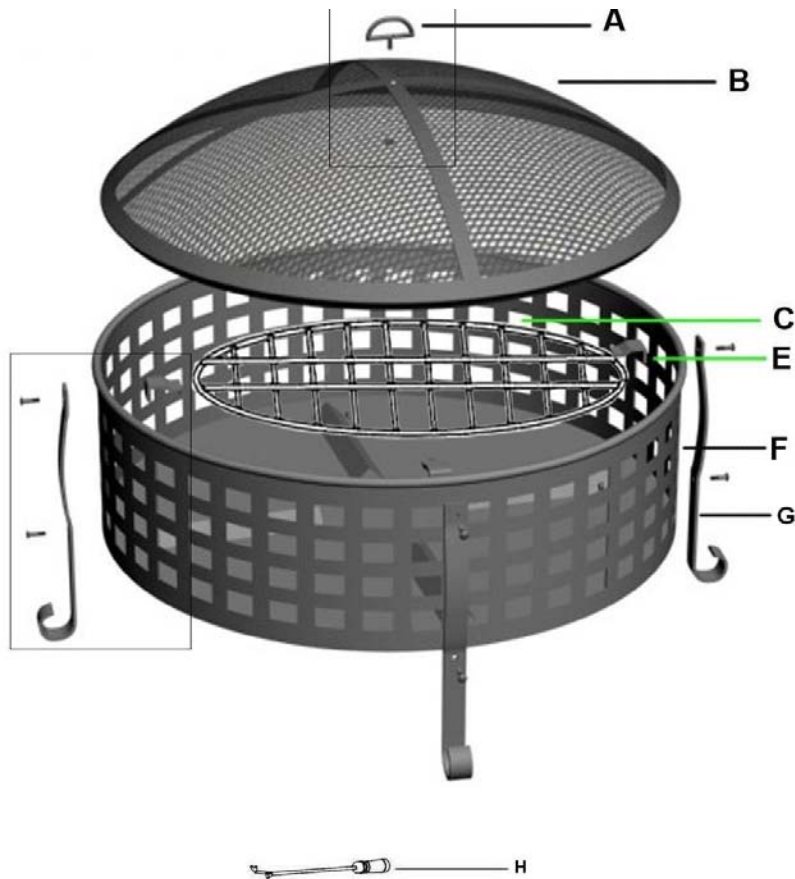


Fig 3

Your fire pit is now ready for use.