

# Adirondack Chair / Rocker

## Assembly Instructions

<b>Hardware List:</b>	<b>Chair</b>	<b>Rocker</b>
2 ½” Brass Fastener	10	8
3 ½” Brass Fastener		2
Brass Fastener end caps	12	12
Self Tapping Screws	8	8
Hanger Bolts (Already attached to Arms)	2	2
Brass Fasteners (Already attached to chair)	2	2

<b>Parts List:</b>		
Back Section	1	1
Seat Section	1	1
Front Leg (Partially attached to chair)	2	2
Back Leg	2	2
Arms (with Arm Brace attached)	2	2
Mahogany Mushroom Plugs	8	8

**Step 1:** Using (2) 2 ½” Brass Fasteners, Rotate front leg (attached to seat section) up to align holes to attach the top bolt hole of the leg to the seat section. Repeat step on opposite side.

**NOTE:** Do not tighten the bolts down completely until the chair is completely assembled. This allows easier attachment and a better fit of the back section. It also reduces the chance of possible damage from over tightening the screws to make a flusher fit.

**Step 2:** Using (2) 2 ½” Brass Fastener, Attach back leg to seat section. (On **Rocker** a 3 ½” Bolt is to be used in the bottom hole. This can be placed now but only temporarily). **Note:** Back leg goes on the outside of the seat section. The angled cut at the top of the back leg should slope downward toward the back of the chair.

**NOTE: Do not tighten bolts down completely.** Repeat step on opposite side.

**Step 3:** Using (1) 2 ½” Brass Fastener (For front of Arm) and (1) Brass Fastener Cap (For Hanger bolt on back of Arm) Attach Arm to front and back leg.

First place the hanger bolt that sticks out of the back of the Arm into the hole in the back leg. (Fasten with Washer and Nut). Next rest the front of the Arm on top of the front leg. Attach the front of the arm to the front leg using 2 ½” Bolt, Washer and Nut. **Note:** The bolt used to attach the Arm to the Front Leg should run from the inside of the chair so that the Washer and Nut are hidden underneath the Arm. Repeat step on opposite side.

**Step 4:** Using (8) Self Tapping Screws attach back section to Chair. This is easiest if (1) Screw is first fastened on at the top of the Back Section into the Back Legs on each side. Next secure (2) Screws per each side at the bottom of the Back Section into the Seat Section. Then secure the remaining (2) Screws at the top of the Back Section into the (2) hole remaining.


**\*\*\*NOTE: Step 4: When attaching the back section with the screws, check to make sure the screw goes through the top piece and into the pre-drilled hole in the bottom board.**

**Step 5: This Step is for Rocker only.** Lay the chair on its side and remove the 3 ½” Brass fastener that was placed into the bottom hole of the back legs in Step 2: Using (1) 2 ½” Brass Fastener, Fasten Rocker to the Front Leg of the Chair. Using the 3 ½” Brass Fastener, Fasten the Rocker to the back of the Chair. (The 3 ½” Brass Fastener should run through Rocker, Back Leg and the Seat Section). **Note:** The front of the Rocker is the side that is the longest. Example: If you hold the Rocker in your hand and look at the cut on the top that makes a “V” (The short side of the “V” goes to the back of the Chair and the long side of the “V” goes toward the front of the chair).

**Step 6: Once assembly of the back section is complete, Tighten all Brass Fasteners throughout the chair**

**Step 7:** Place the (8) Mushroom Plugs in the countersunk holes where the screws were used to attach the Back Section to the Chair at the top and bottom. Glue is not required but if you decide to use glue to install the plugs any exterior wood glue will work fine.

# Adirondack Chair / Rocker

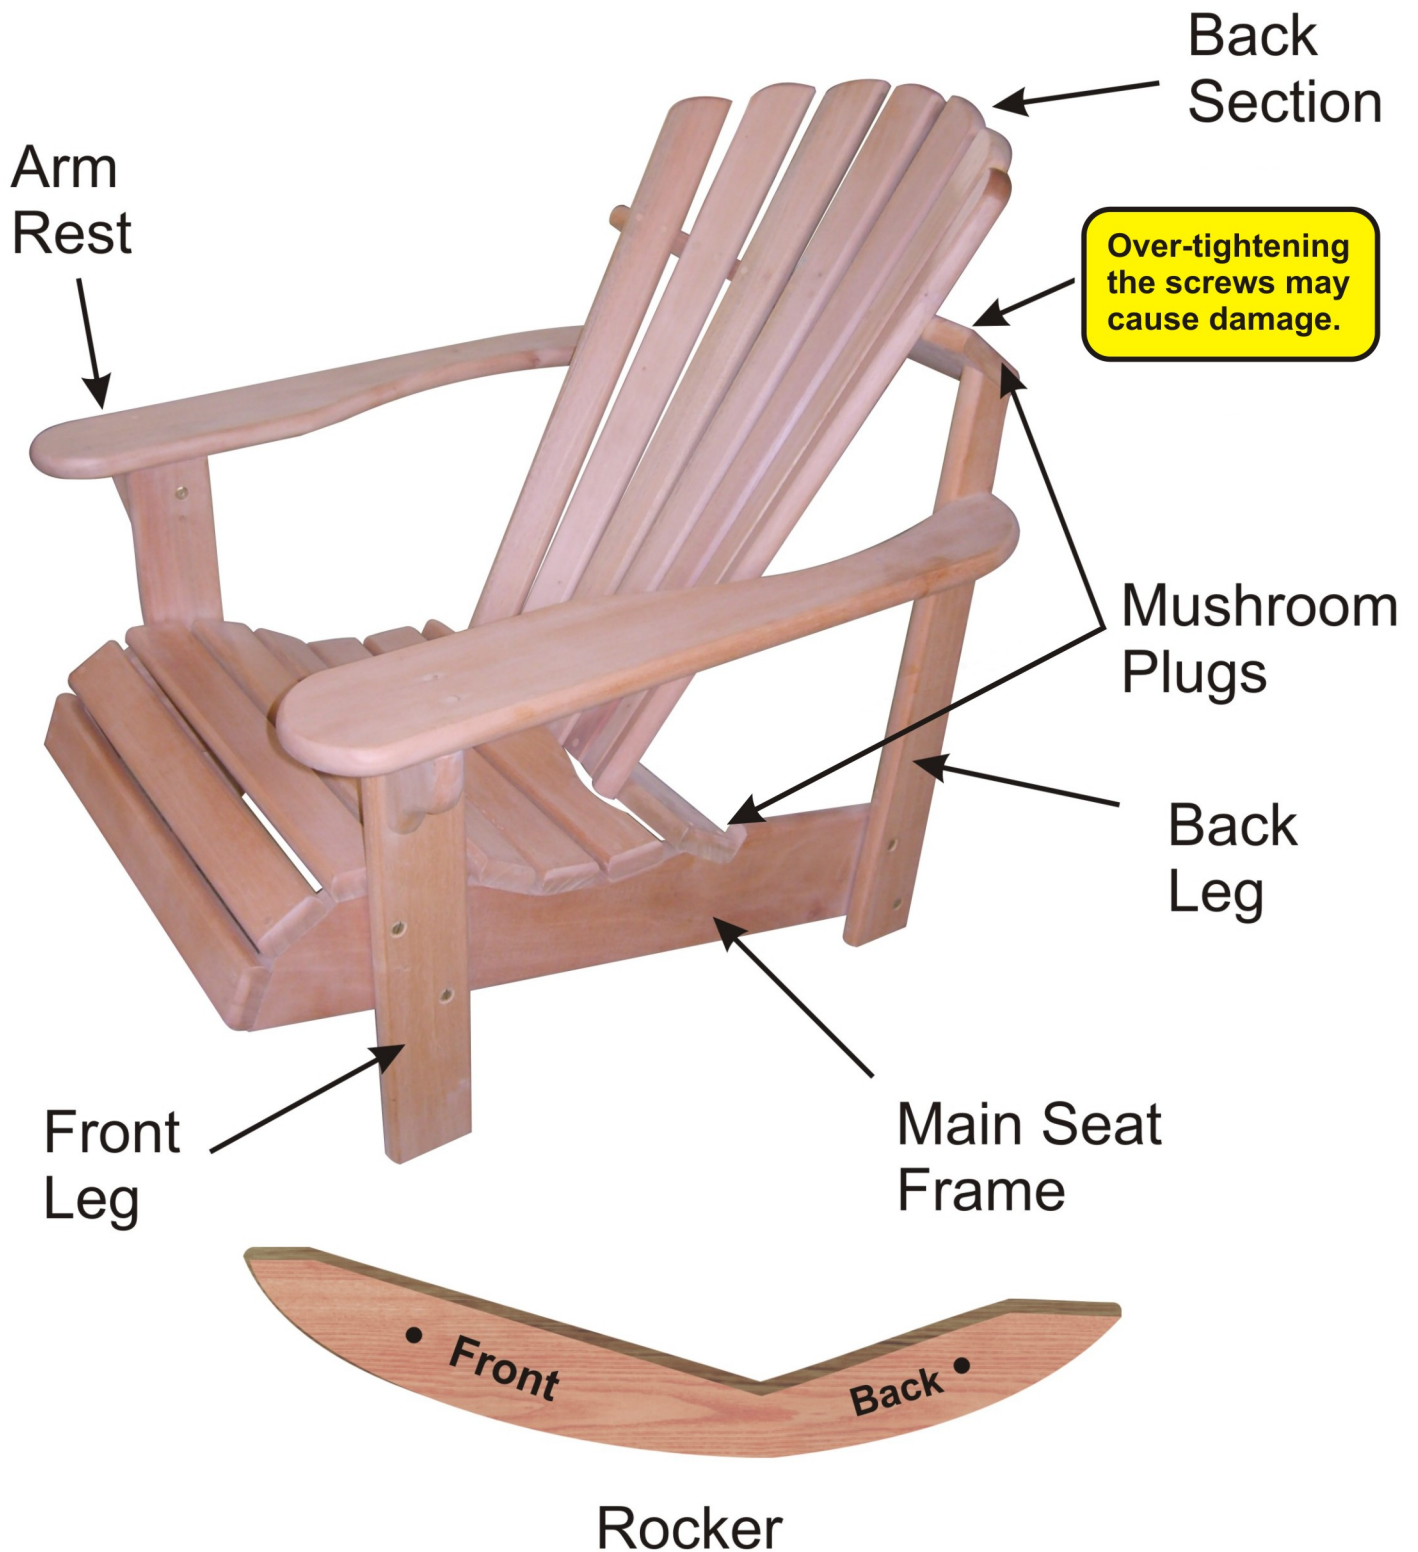

P.O. Box 33  
Adrian, WV 26210  
304-472-1795  
1-888-91RELAX (73529)  
FAX: 304-472-4530  
[www.hyrescountryhaven.com](http://www.hyrescountryhaven.com)

